

For first time users

Set up Hints for Epson Tank Sets

*WHEN USED WITH A COMPUTER AND/OR AS A STAND-ALONE

READ CAREFULLY

- Install Original Epson cartridges allowing printer to initialize
- Don't remove 'colored plugs'
- Attach Chip and Holder to Cartridge
- Insert the correct color ink tank into the holder of the same color
- Press in tanks down until they 'click'
- Close the printer cover
- Press the '◇' button to 'charge ink' (approx. 2 minutes)

You may get a message on your screen indicating that you have 'installed cartridges other than the original Epson cartridges'.

There will be an option 'whether to continue' and/or 'cancel'. Answer 'continue' you should only see this message once.

When sending an image to be printed, a second message may appear (but not in all cases) giving you 3 options, 'Details, 'Cancel' ----- select 'Continue'.

Notice: The "T0", "TX" and "T200" tank set series are **T0695SET-4, T0695SET-5, T0797SET-6, T0735SET-4, T0735SET-5 and T200SET-4**. These tanks include an auto-reset chip. When the printer or monitor show the ink level is used, you only need to follow the "replacing cartridges" operation. You should ONLY remove the cartridge if you are replacing and/or refilling. This will move the cartridge carrier over to the position for replacing ink tanks. Verify if the tank is actually empty. If cartridge is more than ¼ full, reinstall the cartridge and continue printing. If the cartridge is less than ¼ full, replace with new cartridge. This would be a good time to order a new set of cartridges before the old ones are empty (cartridge and chip holders shipped separately).

The above also applies to the message "Does Not Recognize Cartridge"

ESET605 Notes:

For Epson Models C88+ and Cx7800



Current Cartridges DO NOT require a chip resetter!

The correct settings for best image should be as follows:

Quality: PHOTO – Media Type: MATTE < when used with a computer


Quality: BEST – Media Type: PHOTOPAPER < when used as a stand-alone

"ESET605" SERIES

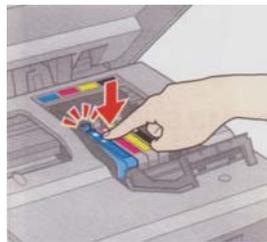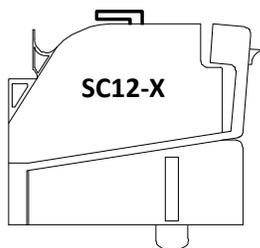

Press Each Cartridge down until it 'CLICKS'

"T0", "TX" & "T200" SERIES

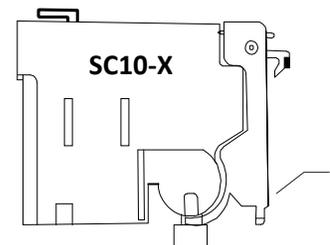

*****Due to shelf life and other health issues, Kopykake does not allow returns of Edible Ink Tanks*****